



Installation Instructions

The following instructions are general guidelines. Installation should be performed by a qualified electrician in accordance with the National Electrical Code and any applicable local codes. Read through the entire instructions before beginning installation. Contact Celestial Lighting for further assistance.


- Step 1** Start the run by placing the fixture closest to the power supply. Mount Striplight to secure surface using mounting tabs located on the fixture. Appropriate screws must be used depending on the surface being mounted.

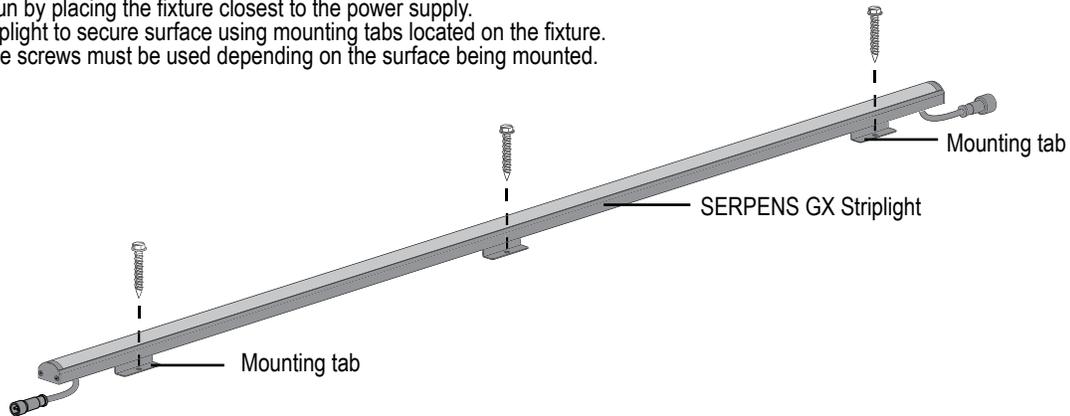

- Step 2** Continue run by aligning the next fixture to the end of the first fixture. Make sure the male and female connectors on each fixture ends are matched correctly. Screw mount fixture to secure surface using appropriate screws. Multiple combinations of 49 inch and 13 inch fixtures may be connected together, so long as the total length of run does not exceed 21 feet. For applications longer than 21 feet, a new run must be fed separately from the power supply.

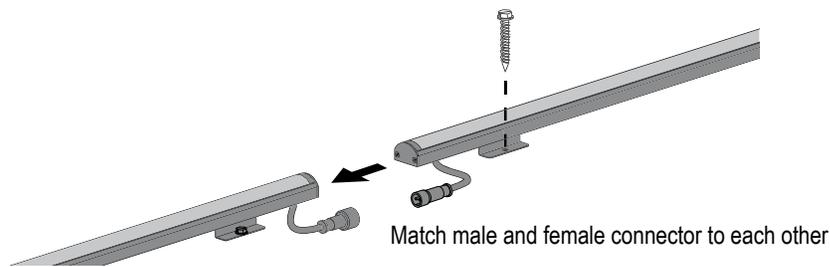

- Step 3** Connect male and female connectors. Make sure to screw female connector to male connector tightly to prevent water from getting into the connectors. Attach end cap connector to the end of run.

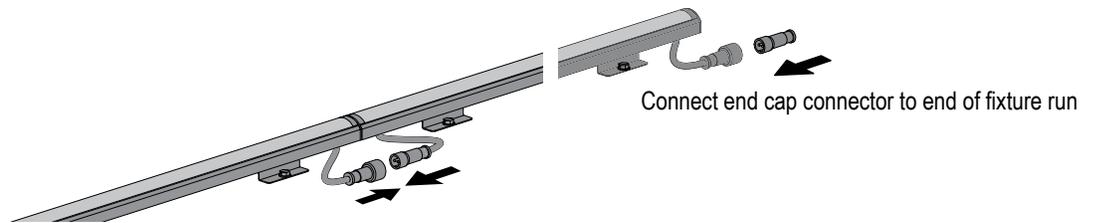

- Step 4** Connect pigtail to beginning of run. Make sure male and female connectors are tightly screwed together.

Wire end of pigtail into power supply. The length of the pigtail is 36 inches in length. If the locations of the power supply is more than 36 inches away, attach additional wire using wet location connectors (not included). Outdoor rated cables and connectors must be used for outdoor applications.

To avoid the effects of voltage drop, see chart below to determine the recommended cable gauge wire to use to feed from the power supply to the start of the lightstrip.

